


# Starting up your Innovaspa hot tub

\*\*Please refer to the owner's manual  
provided with the hot tub for more detail



# Electrical Hook-up

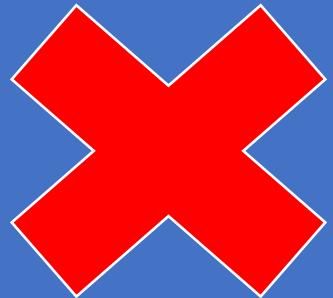

- For 110V operation you can simply plug in the 12ft cable to your outlet.
- The plug has a built in GFCI, plugging it into a Self-Test GFCI Receptacle can cause “phantom trips”! Club Piscine recommends using a standard Receptacle.
- For 220V operation have a certified electrician connect the wiring to a GFCI.
- Do not turn on your hot tub without water

Dipswitch settings for 110V & 220V

MODEL	110V										220V									
	ON	X	X			X		X		X	X	X	X	X	X	X	X			
OFF	X			X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	
DIP #	1	2	3	4	5	6	7	8	9	10	1	2	3	4	5	6	7	8	9	10

Contact us for more information on wiring your hot tub to 220V

# Winter start-up and use

---

- **Start up:** when starting up your hot tub in the winter, please warm up the inside of your hot tub prior to filling it with a ceramic space heater
- **Servicing:** If for some reason your hot tub stops heating or circulating in the winter, please install a ceramic space heater promptly in order to protect your hot tub.
- Please watch the following video on the [Installation of a ceramic space heater in a hot tub - YouTube](#)



YouTube

# Winter start-up and use

---

Your hot tub **must be operating** or professionally winterized from November 1st to April 1st to prevent the risk of freeze damage.

Freeze damage is NOT covered under the manufacturer's warranty

# Fill Up Procedure



Monsoon




Stream

1. Remove any debris from your hot tub.
2. Remove the filter shield to expose the filter and remove the filter cartridge by turning it counterclockwise.
3. Insert your garden hose into the empty filter fitting. **Always** fill your hot tub using this method. See photos.
4. Fill the tub above the highest jets.
5. Once the spa is filled, return the filter to its fitting and reattach the filter shield.
6. Turn on the power by the GFCI/ plug the power cable in. The heater and pump will automatically activate.

Note: The panel may also display “IC”. This is normal. This means the temperature is 20°F below the set temperature. No action is required. The message will disappear as the water heats.

# Spa Functions

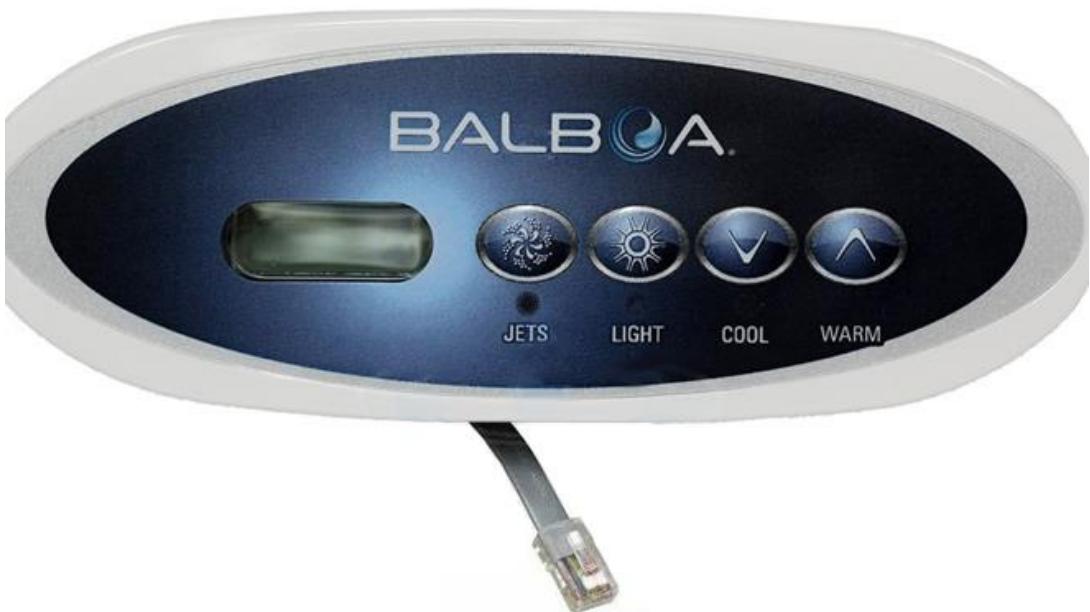

## JETS

The JETS button on the spa's topside control panel is used to turn on and control the intensity of the therapy jets.

The pump's speed determines the intensity of the therapy jet. By pressing the JETS button, you can cycle through its three speeds: high speed, low speed, and off.

\* The jets cannot be turned off while the spa is in filtration or heating mode.

## LIGHT

The LIGHT button controls the colour and mode of the spa's lighting. As you turn them off then on, the light setting will change; Solid Red, then Green, Blue, Yellow, Cyan, Orange, Purple, White, flashing sequence of all of colors, blending sequence, strobing sequence, then blending sequence again.

## COOL/WARM

The WARM and COOL buttons are used to increase and decrease the spa's set temperature.

After pressing one of these buttons, the set temperature will flash for a couple of seconds before returning to the current temperature display.

The hot tub will heat to the set temperature.

# Air controls

## AIR CONTROL SWITCH

These switch can be used to add air to the jets and increase the intensity of the massage.

**While the spa is not in use, always ensure that the air controls are in the off/closed position.**

If they are left on/open while the spa is not in use, the cool ambient air that is injected into the jets during heating and filtration cycles makes the heater work harder to reach the set temperature and reduces the energy efficiency of the spa.



Monsoon



Stream

# Waterfall

The control for your waterfall is highlighted below

During winter, please make sure that your waterfall is always on



Monsoon



Stream

# Whirlpool Jet - Stream Model



**Twisting the whirlpool jet** allows you to choose between 4 different settings.

## Setting 1

Only the whirlpool jet is on.

## Setting 2

The right side of the tub's jets are functioning.

## Setting 3

The left side of the tub's jets are functioning.

## Setting 4

All jets are running simultaneously.

# Filter Care

- The replacement filter for your Innovaspa can be found using this code: **FC-0359**.
- It is recommended that you rinse your filters using clean water **weekly**.
- **Every two months**, Club Piscine recommends soaking your filters in **Jacuzzi Filter Solution** for a deeper clean, killing bacteria caught in the filter and extending the filter's life.
- To use **Jacuzzi Filter Solution**, dilute it in a bucket (250mL per 10L) then soak the filter for 12-24 hours in the solution.
- After soaking the filters, **let them dry completely** before putting them back into the spa.
- It is recommended that you have two sets of filters so that you may rotate in the second set while the first is cleaned.
- Filters should be replaced **yearly**.



# Important Notes

- Never plug your power cable into an extension cord.
- Always unclip all clips, front and back, before opening your cover.
- When adding chemicals always leave the cover off for 20 minutes to prolong the life of your cover.
- Leave the cover ON while heating.
- Always remove snow and ice prior to opening the cover.
- Have your water tested monthly professionally. Free testing is available at your local Club Piscine.
- On average, your tub will heat up 1 degree an hour. Always keep the tub on.

# Advanced Functions

---

## Heat Mode:

- Should ALWAYS be set to Standard Mode or St. In this mode, the heater will activate whenever there is a demand for heat.
- To change this setting, press “Cool” then “Light” and it will toggle through the three modes; St, Ec, and Sl
  - If your Innovaspa hot tub is not heating, check your Heat Mode setting!

# Advanced Functions

---

## Filter Cycles:

- The filter cycle will activate every 12 hours. The 1<sup>st</sup> cycle starts 6 minutes after turning on the hot tub then every subsequent cycle will start every 12 hours after that.
- The factory default setting has each cycle duration set to 4 hours.
  - The settings available are; 1- to 8-hour cycles (*F1, F2, F3, etc.*).
- Club Piscine's recommendation would be to increase this to 6-8 hours.
- To enter the programming menu, press “Cool” then “Jets”. Press “Cool” to toggle through the settings. Press “Jets” to set the cycle duration and exit programming.